

# HIDDEN

隐藏式滑动系统

适用于木门



↑ 微信扫一扫观看安装教程




中意信诚-五金

高端进口五金贸易商！  
优质门控五金一站式解决！

使用抖音扫码，关注@中意信诚-五金








SISTEMI DI SCORRIMENTO / SLIDING SYSTEMS

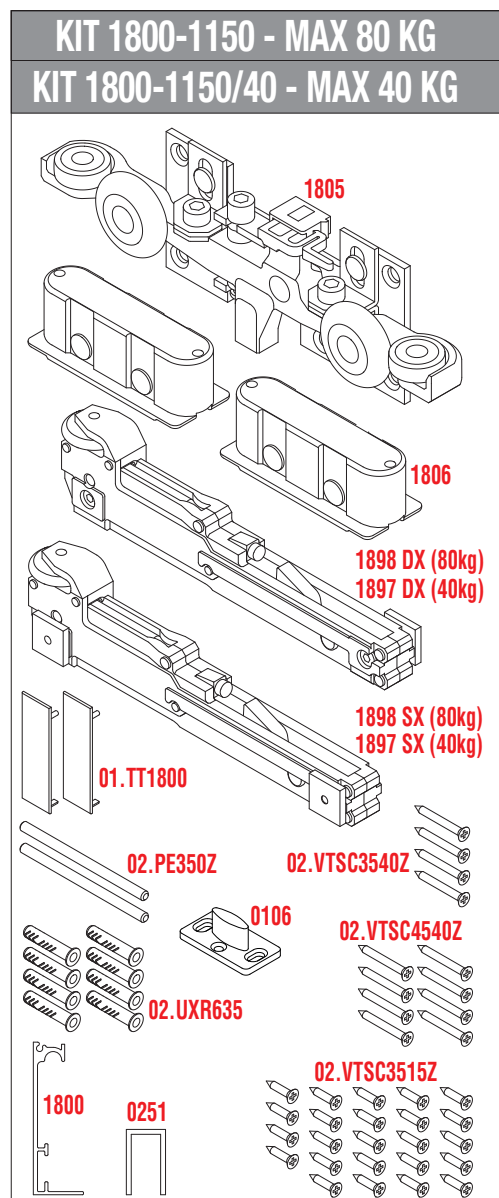


### 配件明细

|                     |                                                             |
|---------------------|-------------------------------------------------------------|
| <b>1805</b>         | Guida superiore regolabile<br>Adjustable upper truck        |
| <b>1806</b>         | Carrello inferiore<br>Lower truck                           |
| <b>0106</b>         | Guida inferiore<br>Lower runner                             |
| <b>01.TT1800</b>    | Tappo terminale<br>End cover                                |
| <b>1898 DX-SX</b>   | Decelerante DX-SX (80kg)<br>Soft Closing Stopper R-L (80kg) |
| <b>1897 DX-SX</b>   | Decelerante DX-SX (40kg)<br>Soft Closing Stopper R-L (40kg) |
| <b>02.PE350Z</b>    | Perno<br>Pin                                                |
| <b>02.VTSC3515Z</b> | Vite 3.5x15<br>Screw 3.5x15                                 |
| <b>02.VTSC3540Z</b> | Vite 3.5x40<br>Screw 3.5x40                                 |
| <b>02.VTSC4540Z</b> | Vite 4.5x40<br>Screw 4.5x40                                 |
| <b>02.UXR635</b>    | Tassello<br>Dowel                                           |
| <b>1800</b>         | Profilo superiore L=1150mm<br>Upper profile L=1150mm        |
| <b>0251</b>         | Profilo inferiore<br>Lower profile                          |

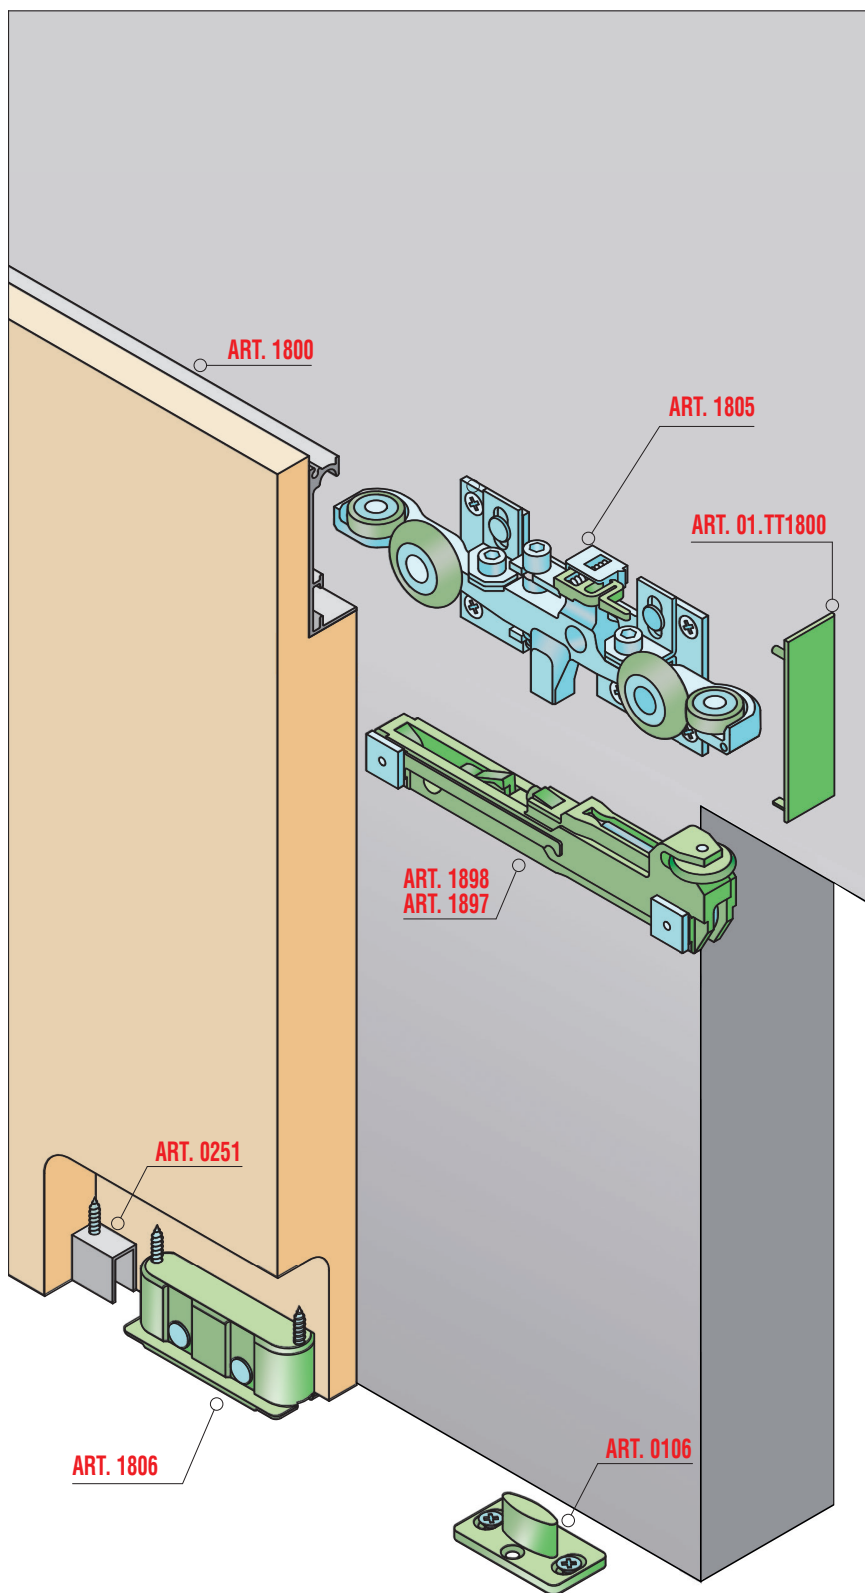


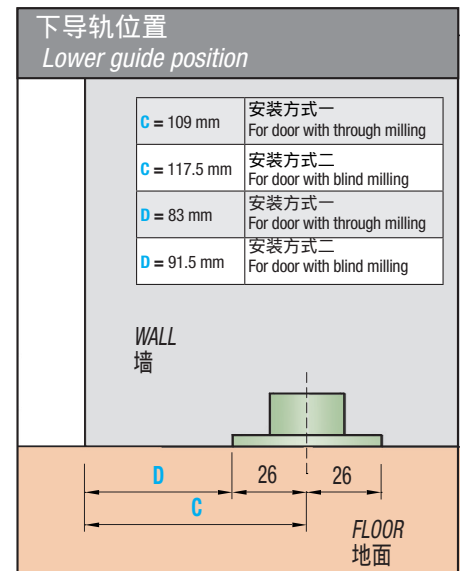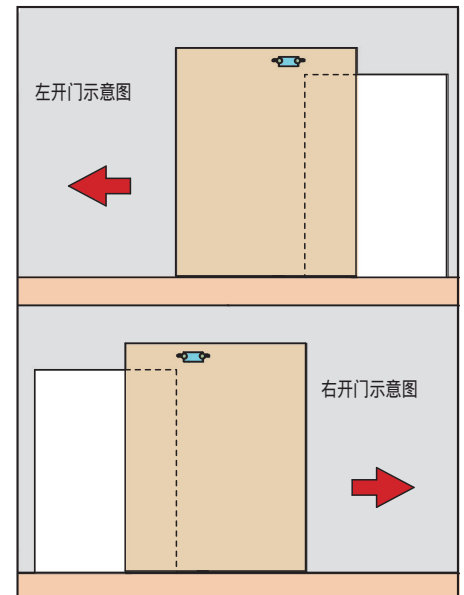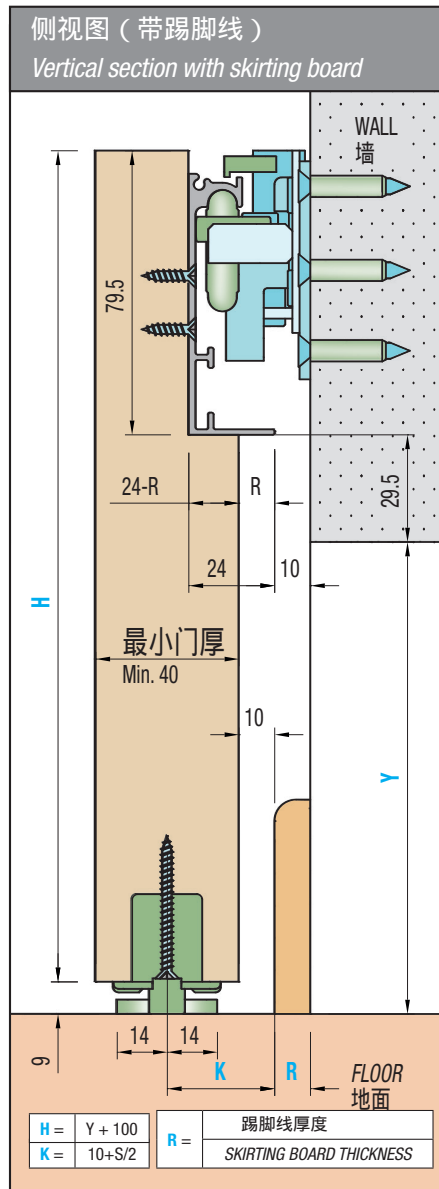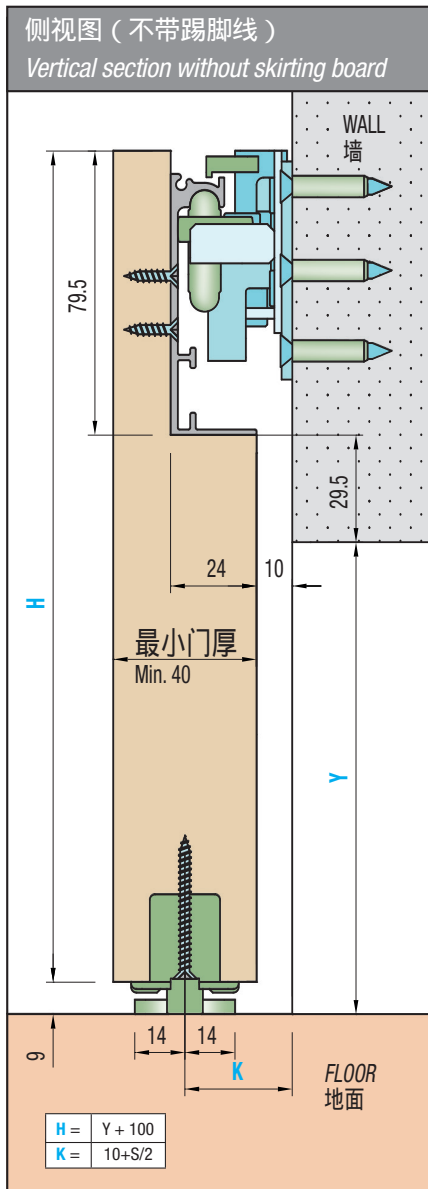


## 两种安装方式

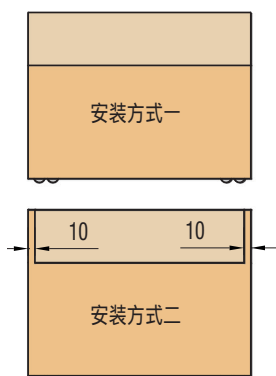


- 安装方式一：  
门板穿透，导轨明装，末端贴片。
- 安装方式二：  
门板不穿透，导轨暗藏。

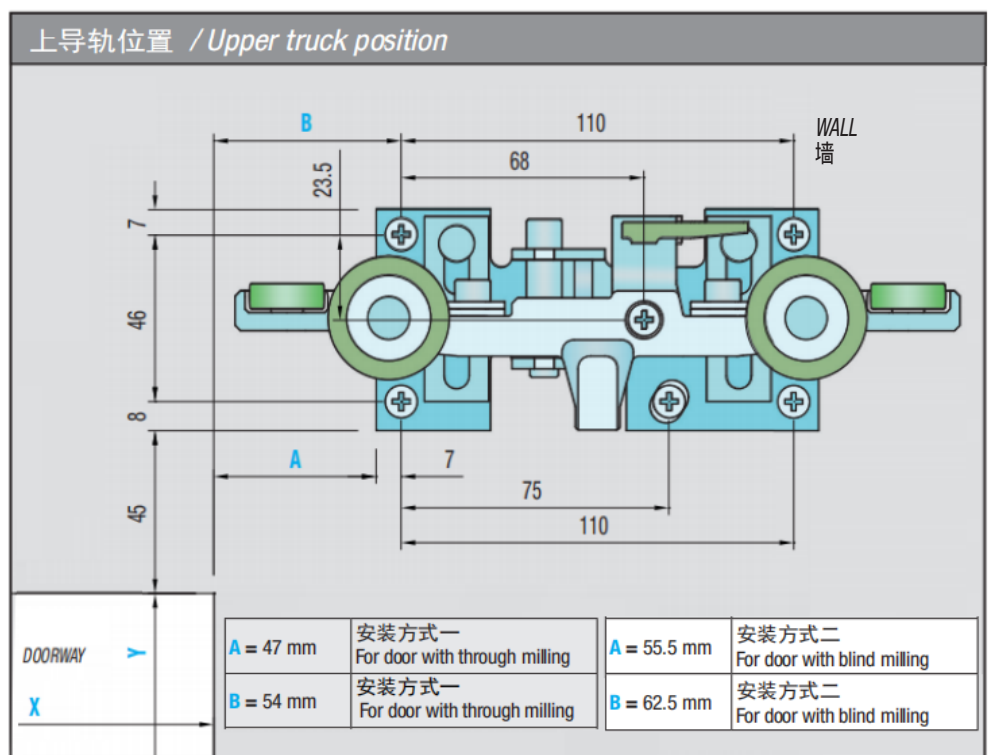


安装方式一标准尺寸图  
Standard dimensions for door with through milling

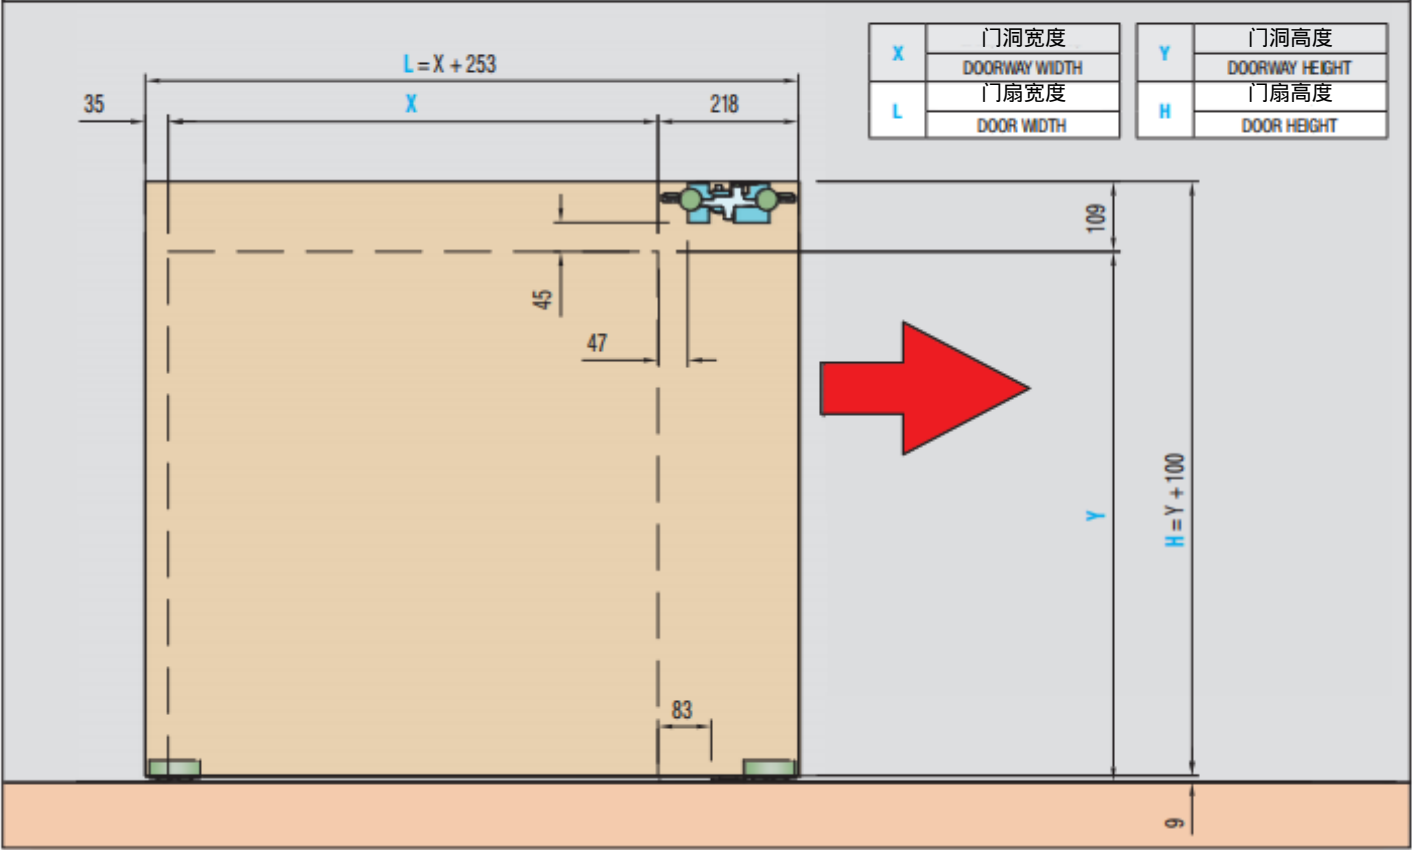

安装方式一开孔图  
Door drilling with through milling

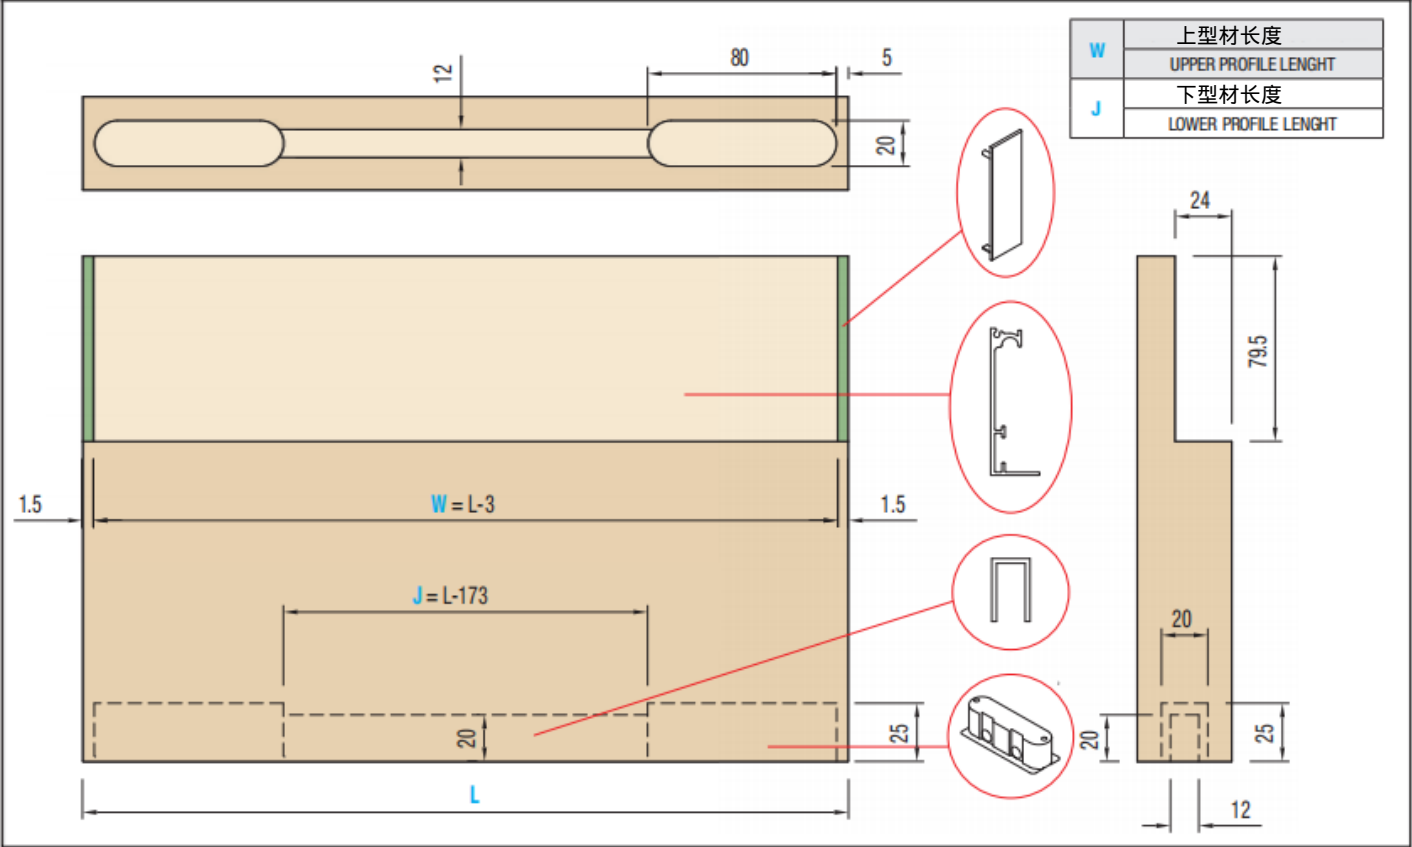


安装方式二标准尺寸图  
Standard dimensions for door with blind milling

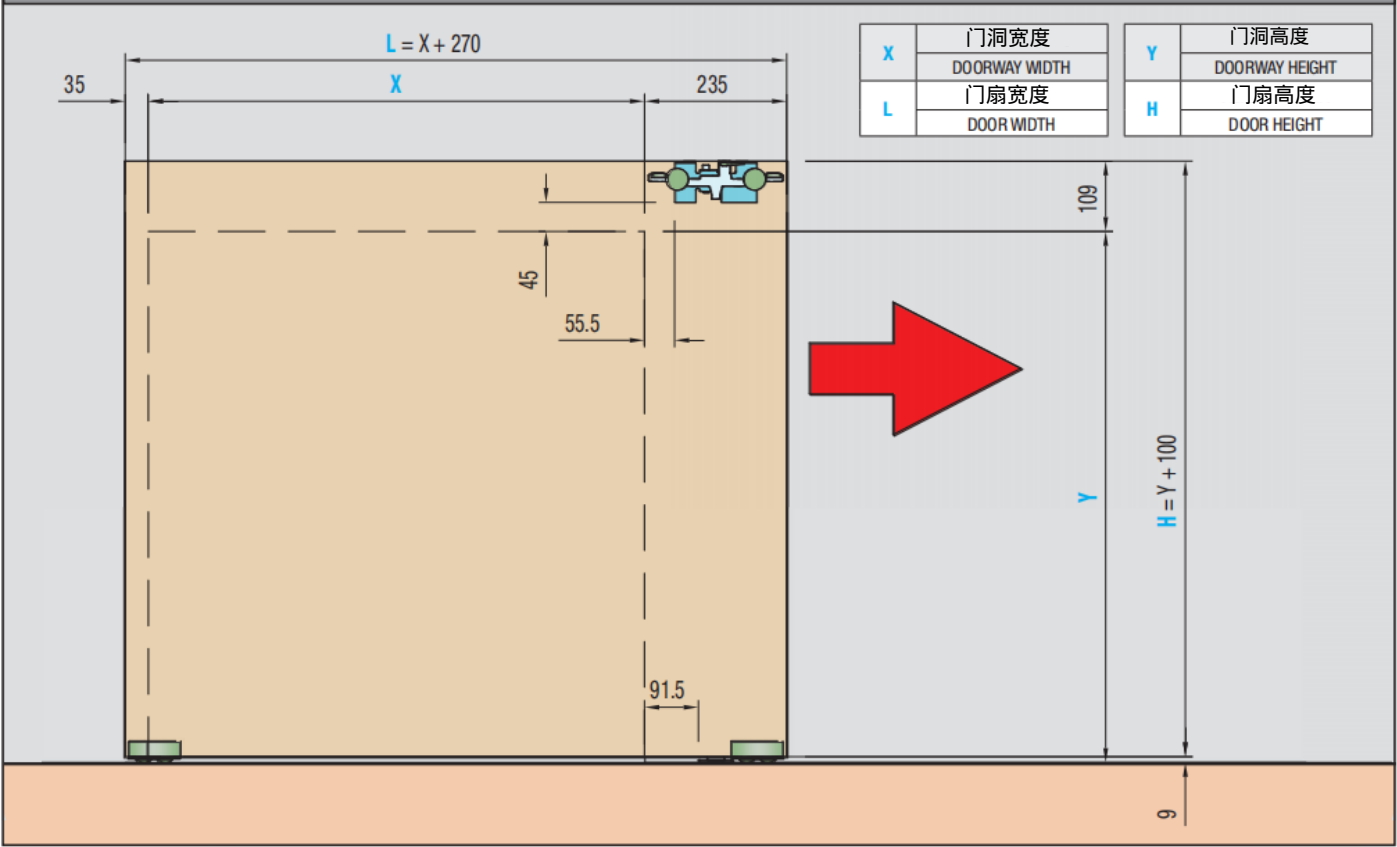


5

安装方式二门开孔图  
Door drilling with blind milling

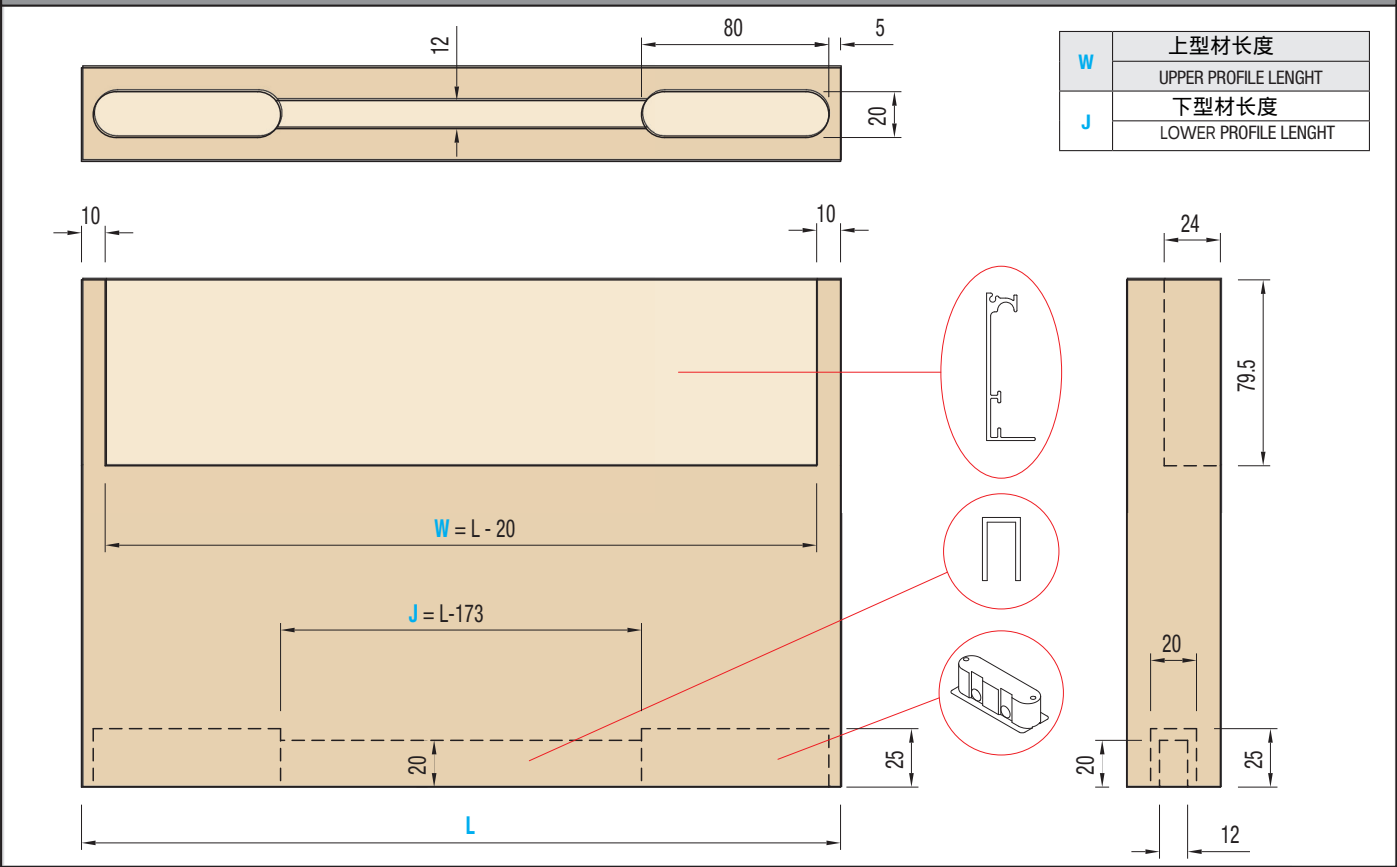


## 自激活装置 / Automatic self activating device

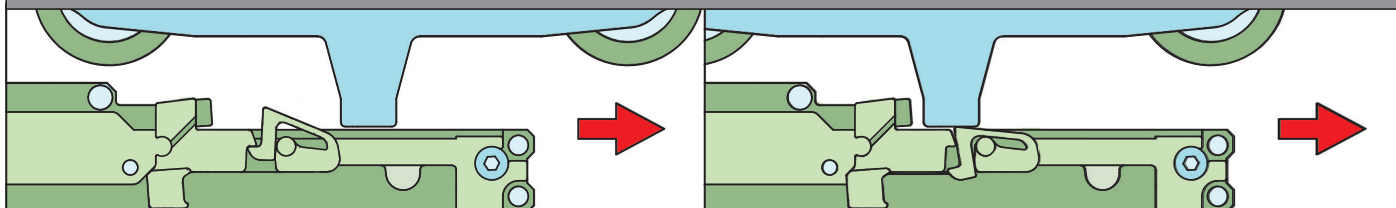

## 调节指导 / Assembly instructions


①

将上导轨的中心与门的中心线对齐，  
如下图所示，  
检查防脱扣是否被激活。  
Fit the center line of the door close to the upper truck previously  
fastened to the wall. Check that the clasp is not triggered,  
as shown in the figures below.

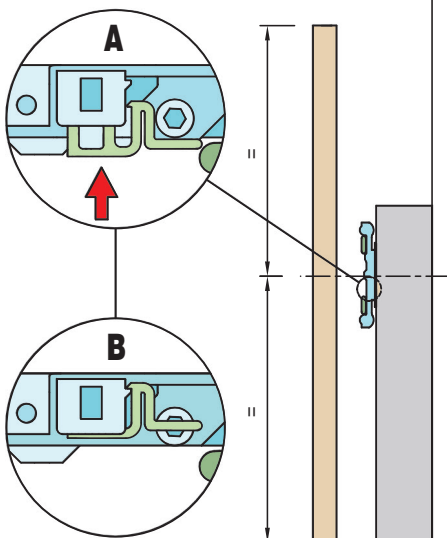



②

固定下滚轮 ART. 0106，  
将门装在上导轨。  
Position the door astride the runner ART. 0106 lying  
the lower wheels on the ground.

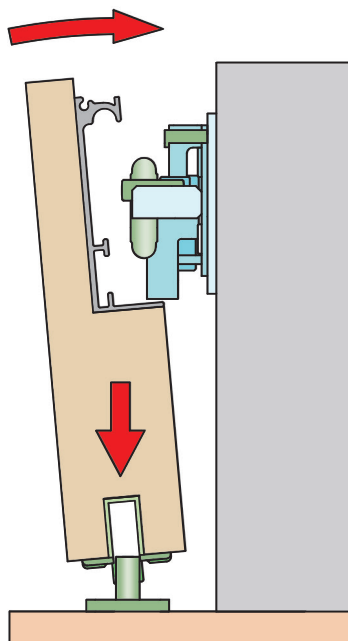


③

通过使型材靠在上支架的滚轮上，  
使门处于垂直位置。将门一直压在上  
支架上，直到组装结束。  
Put the door in a vertical position, placing  
its profile on the wheels of the upper truck.  
Keep the door pushed against the upper  
truck till the end of the assembly.

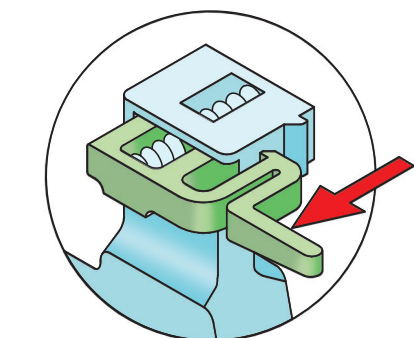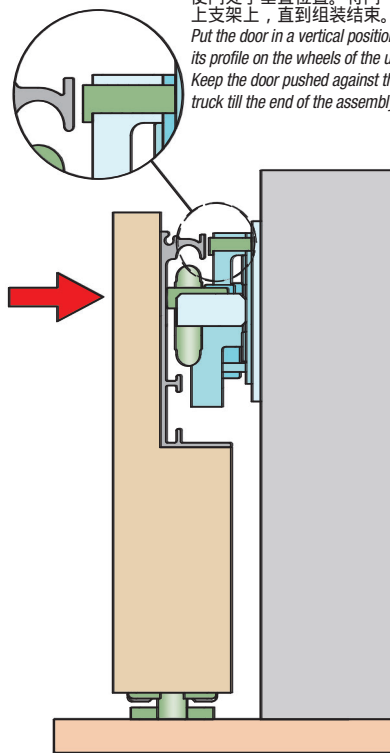


④

拉开防脱扣  
Pull the lever of the clasp.

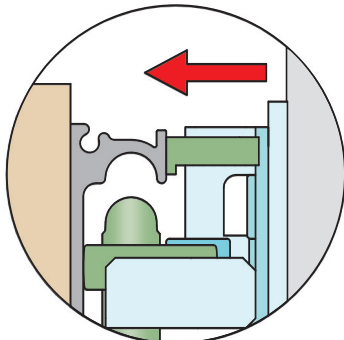



⑤

防脱扣自动放在上部型材上。  
The clasp will automatically lie on the upper profile.

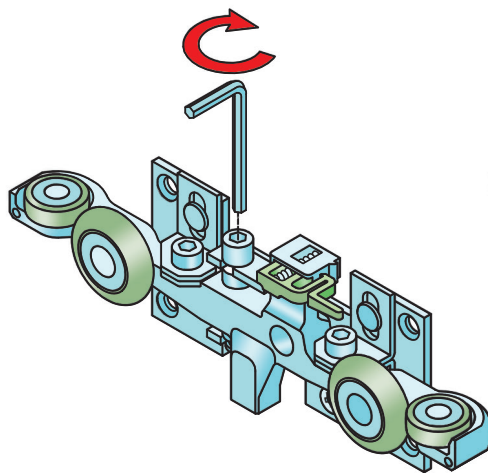


⑥

拧紧壁挂支架的高度调节螺丝。  
Fasten the screw for the adjustment  
of wall bracket height.  
向上拧摇杆，使滚轮靠近型材。  
The rocker arm rises, moving the wheels closer to the profile.  
当防脱扣发出“咯哒”声时，停止拧紧。  
When the clasp makes a loud “Click”, stop fastening.

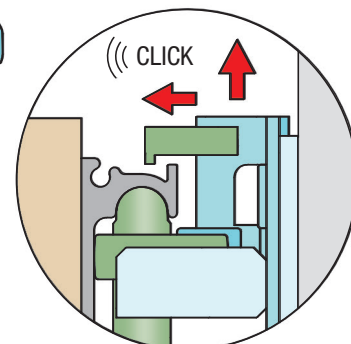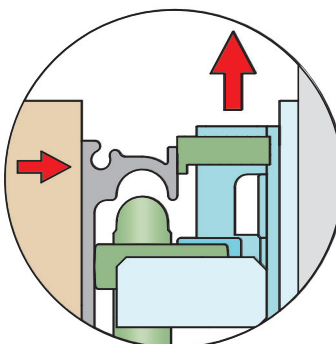


门与墙平行调整 / Door/Wall alignment adjustment

7

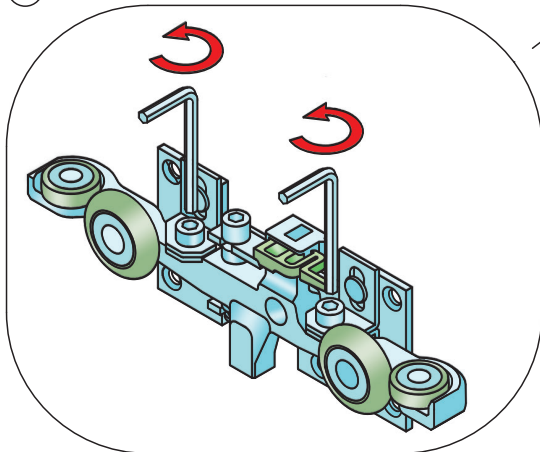


如果门与墙不平行，则松开两个螺丝。

IF THE DOOR IS NOT ALIGNED WITH THE WALL  
LOOSEN THE FIXING SCREWS

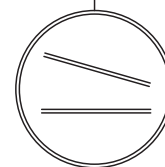


8

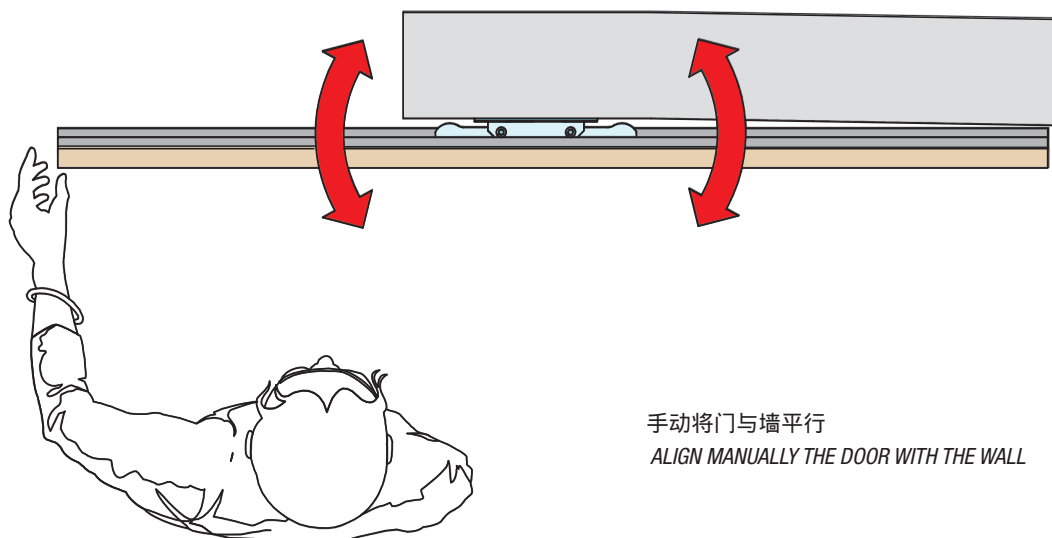


手动将门与墙平行  
ALIGN MANUALLY THE DOOR WITH THE WALL

9

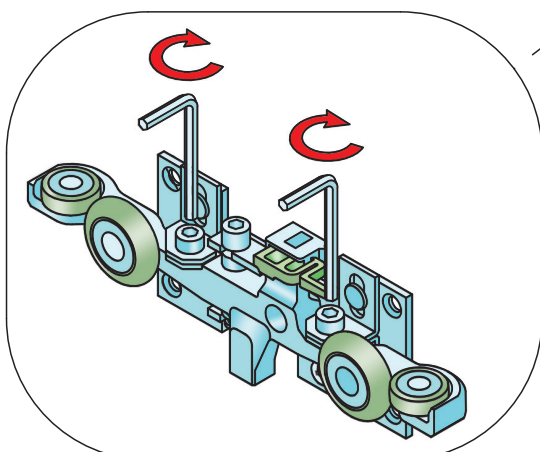

拧紧两个固定螺丝

LOCK THE ALIGNMENT SCREWING THE FIXING SCREWS

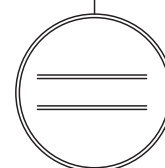



北京中意信诚贸易有限公司  
咨询微信：13910114747  
[www.china-era.com](http://www.china-era.com)